

PRODUCT DESCRIPTION

RATING (SELECT ONLY ONE)			
RATED INPUT	DRIVE MODEL NO. (GPD50GV-)	120% OL APPLICATIONS 100% CONTINUOUS OUTPUT CURRENT(A)	NOMINAL HP
208V	A130	130	40
	A160	160	50
	A192	192	60
	A248	248	75
	A312	300	100
230V	A130	130	50
	A160	160	60
	A192	192	75
	A248	248	100
	A312	312	125
460V	B128	128	100
	B180	156	125
	B180	180	150
	B240	240	200
	B302	300	250
	B380	380	300
	B506	414	350
	B506	506	400
	B675	515	450
	B675	675	500

ENCLOSURE TYPE		OPTION DESIG.	
NEMA 1 VENTED		V	
BLOWERED		B	

DRIVE OPERATION MODE SELECTION TABLE 5

n002 SETTINGS	RUN/STOP COMMAND	FREQUENCY REFERENCE	SEE NOTE
0	KEYPAD	KEYPAD	9
1	EXT. TERMINALS	KEYPAD	9
2	KEYPAD	EXT. TERMINALS	9
3	EXT. TERMINALS	EXT. TERMINALS	9
4	KEYPAD	SERIAL COMM.	9
5	EXT. TERMINALS	SERIAL COMM.	9
6	SERIAL COMM.	SERIAL COMM.	10
7	SERIAL COMM.	KEYPAD	10
8	SERIAL COMM.	EXT. TERMINALS	10

OPTION TABLE 2

OPTION DESIGNATOR	DESCRIPTION
Y1	2CN OPTION - CM043 METASYS N2 COMMUNICATIONS
Y2	2CN OPTION - CM045 FLN COMMUNICATIONS
Y3	2CN OPTION - CM047 ECHELON COMMUNICATIONS
Y4	2CN OPTION - CM086 RS-232 TO RS-485 INTERFACE
Y5	2CN OPTION - DS006 ANALOG MONITOR - V/I
SEE TABLE 3 FOR OPTION DESIG.	"RUNNING ON BYPASS" AND "RUNNING ON DRIVE" PILOT LIGHTS
T	RFI NOISE SUPPRESSION NETWORK
S	ENGRAVED DRIVE CABINET NAMEPLATE
T	MANUAL SPEED POT
S	AUTO TRANSFER TO BYPASS UPON DRIVE FAULT
S	SMOKE PURGE
R	INPUT REACTOR
P	PRESSURE TRANSDUCER (3-15 PSI)
F	INPUT FUSING
E	INPUT RFI FILTER

OPTION TABLE 3

OPTION	OPTION DESIGNATION															
	1	2	3	4	5	6	7	G	H	J	K	L	N	U	W	
PILOT LIGHTS	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	
RFI NOISE SUPPRESSION NETWORK	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1	
ENGRAVED DRIVE CABINET NAMEPLATE	0	1	1	0	1	1	0	0	1	1	0	0	1	1	1	
MANUAL SPEED POT	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	

SPECIAL PARAMETER SETTINGS TABLE 4 (SEE NOTE 8)

PARAMETER	DATA	UNIT	DESCRIPTION/REMARKS
n001	3	N/A	READ/WRITE TO ALL PARAMETERS
n002	SEE TABLE 5	N/A	DRIVE OPERATION MODE SELECTION
n003	460(230)	V	STANDARD MAX VOLTAGE SETTING
	208	V	MAX VOLTAGE SETTING FOR BASE NO. "D_"
n006	1	N/A	REVERSE RUN DISABLED
n007	0	N/A	LOCAL/REMOTE KEY DISABLED
n018	60.0	S	ACCELERATION TIME
n019	60.0	S	DECELERATION TIME
n024	10.0	HZ	KEYPAD SPEED REFERENCE
n033	---	AMPS	MOTOR FULL LOAD AMPS- (MUST BE SET BY CUSTOMER)
n038	5	N/A	REMOTE/LOCAL (USED FOR NORMAL/TEST)
n039	9	N/A	TERMINAL S5 SELECTS AUTO/HAND SPEED REFERENCE SELECT
n040	21	N/A	PID CONTROL DISABLE
n043	1	N/A	TERMINALS FI AND FV ANALOG INPUT SELECTION
n044	0	N/A	FOR OPTION P 0 TO 10VDC AUTO MODE SIGNAL, WITH CONTROL BOARD JUMPER J1 OUT
	1	N/A	4-20 MADC AUTO MODE SIGNAL
n055	1	N/A	MOMENTARY POWER LOSS RIDE THROUGH ENABLED
n056	20	%	SPEED SEARCH OPERATION LEVEL
n057	1.0	S	MINIMUM BASE BLOCK TIME
n058	25	%	V/F DURING SPEED SEARCH
n061	1	N/A	DRIVE FAULT RELAY DE-ENERGIZED DURING AUTO RESTART ATTEMPTS
n068	50	%	DC INJECTION BRAKING CURRENT LEVEL
n070	5.0	S	DC INJECTION BRAKING TIME AT START

NOTES:

- * COMPONENTS NOT SUPPLIED BY YASKAWA.
 - * CUSTOMER WIRING - FOR 0 TO 100 AMPS, USE 60°-75°C COPPER WIRE. ABOVE 100 AMPS, USE 75°C COPPER WIRE.
 - CUSTOMER CONNECTION POINT ON PANEL MOUNTED TERMINAL BLOCK TB1. TORQUE WIRE CONNECTIONS TO 16-20 LB. IN.
 - FACTORY CONNECTION POINT ON DRIVE A1.
- REFER TO THE PRODUCT DESCRIPTION AND ASSOCIATED OPTION TABLES TO DETERMINE WHICH OPTIONS ARE PRESENT.
- CONNECTED TO CABINET. CUSTOMER TO CONNECT CABINET GROUND LUG TO EARTH GROUND.
 - MOTOR OVERLOAD RELAY, SI2, IS FACTORY SET FOR MANUAL RESET. CUSTOMER TO ADJUST SI2 TRIP SETTING FOR THE AC MOTOR'S FULL LOAD AMPS.
 - TERMINALS SUPPLIED FOR INSERTION OF NORMALLY CLOSED CUSTOMER SAFETY CONTACTS I.E. FIRESTAT, FREEZESTAT, WINDING OR BEARING TEMPERATURE ACTIVATED SWITCHES. IF APPLICABLE, REMOVE THE FACTORY INSTALLED JUMPER J1.
 - A. TERMINALS SUPPLIED FOR INSERTION OF CUSTOMER SUPPLIED DAMPER ELECTRIC PNEUMATIC VALVE (SOLENOID), WITH A MAXIMUM POWER RATING OF 100VA SEALED AND 170VA INRUSH, USED TO CONTROL THE OPENING AND CLOSING OF A SYSTEM DAMPER. IF APPLICABLE, CHANGE DRIVE PARAMETER n004 TO 1.
 - B. TERMINALS SUPPLIED FOR INSERTION OF CUSTOMER SUPPLIED, NORMALLY OPEN DAMPER END SWITCH (OPEN-DAMPER CLOSED, CLOSED-DAMPER FULLY OPEN). IF APPLICABLE, REMOVE THE FACTORY INSTALLED JUMPER J2.
 - INSULATED TWISTED SHIELDED WIRE IS REQUIRED. 2 CONDUCTOR #18GA. (BELDON #8760, OR EQUIVALENT). SHIELD TO CONNECT TO PROPER TERMINAL AS SHOWN, CONNECTION AND 170VA INRUSH, USED TO CONTROL THE OPENING AND CLOSING OF A SYSTEM DAMPER. IF APPLICABLE, CHANGE DRIVE PARAMETER n004 TO 1.
 - TERMINALS SUPPLIED FOR INSERTION OF CUSTOMER SUPPLIED, NORMALLY OPEN DAMPER END SWITCH (OPEN-DAMPER CLOSED, CLOSED-DAMPER FULLY OPEN). IF APPLICABLE, REMOVE THE FACTORY INSTALLED JUMPER J2.
 - IF A "2 WIRE" OR "3 WIRE" INITIALIZATION IS PERFORMED ON THE DRIVE, THEN THE DRIVE PARAMETERS NEED TO BE RE-ENTERED, AS SHOWN IN THE SPECIAL PARAMETER SETTINGS TABLES 4 AND 5.
 - IF RUN/STOP IS TO BE PERFORMED VIA THE DRIVE KEYPAD, THEN THE CUSTOMER SAFETY INTERLOCK, THE DAMPER CONTROL AND THE DAMPER END SWITCH WILL NO LONGER FUNCTION. CONTACT THE FACTORY, IF THESE FUNCTIONS ARE REQUIRED.
 - SERIAL COMMUNICATIONS RUN/STOP CONTROL: THE CUSTOMER MUST ADD A JUMPER J4 BETWEEN POINTS 3 AND 4 ON THE PANEL MOUNTED TERMINAL BLOCK TB1, AND THE HAND/STOP/AUTO SWITCH, S2 MUST BE IN THE "AUTO" POSITION, IF SERIAL COMMUNICATIONS IS TO BE USED TO CONTROL THE RUN/STOP OF THE DRIVE.
 - HAND/STOP/AUTO SWITCH OPERATION: THE FUNCTION OF THE HAND/STOP/AUTO SWITCH IS TO SELECT SPEED AND RUN/STOP CONTROL. THE AUTO POSITION SELECTS THE AUTO SIGNAL INPUT FOR SPEED AND A CUSTOMER SUPPLIED CONTACT FOR A RUN COMMAND, THE HAND POSITION SELECTS THE CABINET DOOR MOUNTED SPEED POT R1 FOR SPEED AND A RUN COMMAND ACTIVATED BY THE BYPASS/OFF/DRIVE SWITCH.
 - TEST/NORMAL SWITCH OPERATION: THE FUNCTION OF THE TEST/NORMAL SWITCH IS TO TEST THE DRIVE WHILE IN EITHER THE OFF OR BYPASS MODE. IF THE TEST/NORMAL SWITCH IS IN THE TEST POSITION WHILE OPERATING IN THE DRIVE MODE, THEN THE DRIVE WILL FAULT ON AN "E3". THIS FAULT MAY BE RESET BY FIRST SWITCHING TO EITHER "BYPASS" OR "OFF", AND THEN PRESSING RESET ON THE DRIVE KEYPAD.
 - SMOKE PURGE SWITCH OPERATION: THE FUNCTION OF THE SMOKE PURGE OPTION IS TO CAUSE THE MOTOR TO RUN AT FULL SPEED, ACROSS THE LINE, REGARDLESS OF ANY DRIVE, MOTOR OR CUSTOMER SAFETY FAULTS, WHEN THE CUSTOMER SUPPLIED NORMAL/PURGE SWITCH IS IN THE "PURGE" POSITION. IF THIS OPTION IS USED WITH THE PILOT LIGHTS OPTION, THEN BOTH THE "RUNNING ON DRIVE" AND "RUNNING ON BYPASS" PILOT LIGHTS WILL BE LIT IN THE "PURGE" AND "DRIVE" MODES.

CONTACT SEQUENCE CHART FOR S1

CONTACT	POSITION	MANUF. LOCATION /TYPE
1	X	1R0
2		X 1L0
3		X 2L0
4		X 3L0

CONTACT SEQUENCE CHART FOR S2

CONTACT	POSITION	MANUF. LOCATION /TYPE
1	X	1R0
2		X 1L0
3	X	2R0
4		X 2L0
5	X	3R0

CONTACT SEQUENCE CHART FOR S3

CONTACT	POSITION	MANUF. LOCATION /TYPE
1	X	1R0
2	X	1L0
3	X	2R0
4	X	2L0

* SCHEMATIC SHOWS THIS POSITION.

CONTACTS 4 AND 5 PRESENT ONLY WITH OPTION P.
* SCHEMATIC SHOWS THIS POSITION.

