

TABLE 1 FACTORY SET A1000 CONFIGURED DRIVE PARAMETERS

PARAMETER	DATA	UNIT	DESCRIPTION/REMARKS
A1-02	SEE TABLE 2	N/A	CONTROL METHOD SELECTION
b1-01	SEE TABLE 4 OR 5	N/A	FREQUENCY REFERENCE SELECTION 1
b1-02	SEE TABLE 4 OR 5	N/A	RUN COMMAND SELECTION 1
b1-15	SEE TABLE 4 OR 5	N/A	FREQUENCY REFERENCE SELECTION 2
b1-16	SEE TABLE 4 OR 5	N/A	RUN COMMAND SELECTION 2
C6-01	SEE TABLE 3	N/A	DRIVE DUTY RATING
d1-01	10.0	HZ.	FREQUENCY REFERENCE 1 - SEE TABLE 4 OR 5
d1-02	20.0	HZ.	FREQUENCY REFERENCE 2 - SEE TABLE 5
E1-01	208	VOLTS	INPUT VOLTAGE SETTING FOR BASE NUMBER "D_----"
	240(480)		STANDARD INPUT VOLTAGE SETTING
	600		INPUT VOLTAGE SETTING FOR BASE NUMBER "C_----"
E1-05	208	VOLTS	MAXIMUM OUTPUT VOLTAGE FOR BASE NUMBER "D_----"
	230(460)		STANDARD MAXIMUM OUTPUT VOLTAGE SETTING
	575		MAXIMUM OUTPUT VOLTAGE SETTING FOR BASE NUMBER "C_----"
E2-01	---	AMPS	MOTOR FULL LOAD AMPS (MUST BE SET BY USER)
H1-05	SEE TABLE 4 OR 5	N/A	MULTI-FUNCTION DIGITAL INPUT TERMINAL S5 FUNCTION SELECTION
H1-06	SEE TABLE 4 OR 5	N/A	MULTI-FUNCTION DIGITAL INPUT TERMINAL S6 FUNCTION SELECTION
H3-02	SEE TABLE 4 OR 5	N/A	TERMINAL A1 FUNCTION SELECTION
H3-06	SEE TABLE 4 OR 5	N/A	TERMINAL A3 FUNCTION SELECTION
H3-09	SEE TABLE 4 OR 5	N/A	TERMINAL A2 SIGNAL LEVEL SELECTION
L3-04	SEE TABLE 2	N/A	STALL PREVENTION DURING DECELERATION SELECTION
o2-03	1	N/A	USER INITIALIZATION FACTORY SET PARAMETER DEFAULT VALUES (FOUND IN A1-03= "1110")
o3-02	1	N/A	COPY ALLOWED SELECTION ENABLED

TABLE 2 A1C FACTORY SET DRIVE PARAMETERS

OPTION	PARAMETER
PRESENT	A1-02 L3-04
NONE	2 ■ 1 ■
PJ OR PL	2 ■ 0
TX	3 1 ■
(PJ OR PL) AND TX	3 0

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING

TABLE 3 A1C FACTORY SET DRIVE PARAMETERS

A1000 CONFIG. MODEL NO. BASE NUMBER A1C(-)xxxx	PARAMETER
1 OR 2	1 ■
4 OR 5	0

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING

DRIVE OPERATION MODE SELECTION WITHOUT THE HAND/OFF/AUTO SELECTOR SWITCH OPTION TY

TABLE 4 A1C FACTORY SET DRIVE PARAMETERS

OPTION	PARAMETER												DRIVE REFERENCE			DRIVE		
	b1-01	b1-02	b1-15	b1-16	H1-05	H1-06	H3-02	H3-06	H3-09	DRIVE KEYPAD	SPEED REFERENCE	SERIAL COMM. A1	SERIAL COMM. A2, OR POT.	SERIAL COMM. A3	DRIVE TERMINAL S1 OR S2	DRIVE SERIAL COMM.	DRIVE STOP CONTROL	
PRESENT	1 ■	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■	0-10VDC AT TERM. A1	0-10VDC AT TERM. A2, OR POT.	0-10VDC AT TERM. A3	YES	YES	YES	YES	YES	
NONE +	0	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■	YES			YES	YES				
NONE	1 ■	0	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■	YES			YES	YES				
NONE	0	0	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■									
TZ +	1 ■	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■				YES	YES	YES	YES	YES	
TZ	1 ■	0	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■				YES	YES	YES	YES	YES	
TD,TG,TH OR TQ +	3	3	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■				YES	YES	YES	YES	YES	
TD,TG,TH OR TQ	1 ■	3	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■									
TD,TG,TH OR TQ	0	3	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■				YES	YES	YES	YES	YES	
TD,TG,TH OR TQ	3	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■									
TD,TG,TH OR TQ	3	0	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■									
TZ AND (TD,TG,TH OR TQ)	1 ■	3	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■				YES	YES	YES	YES	YES	

+ = STANDARD A1000 CONFIGURED SET UP

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING

DRIVE OPERATION MODE SELECTION WITH THE HAND/OFF/AUTO SELECTOR SWITCH OPTION TY

TABLE 5 A1C FACTORY SET DRIVE PARAMETERS

OPTION	PARAMETER												DRIVE REFERENCE			DRIVE		
	b1-01	b1-02	b1-15	b1-16	H1-05	H1-06	H3-02	H3-06	H3-09	DRIVE KEYPAD	SPEED REFERENCE	SERIAL COMM. (4) AND (5)	SERIAL COMM. (1) AND (2)	HAND MODE	AUTO MODE	HAND/OFF/AUTO SWITCH IN THE "HAND" POSITION	RUN CONTACT AT TB1	SERIAL COMM. (1) AND (2)
PRESENT	1 ■	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■	d1-02	4 TO 20mADC	4 TO 20mADC	YES	YES	YES	YES	YES	YES
TY +	1 ■	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■	d1-02	4 TO 20mADC	4 TO 20mADC	YES	YES	YES	YES	YES	YES
TY	1 ■	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■	d1-02	4 TO 20mADC	4 TO 20mADC	YES	YES	YES	YES	YES	YES
TY AND TZ +	1 ■	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■		YES	4 TO 20mADC	YES	YES	YES	YES	YES	YES
TY AND TZ	1 ■	1 ■	0 ■	0 ■	3 ■	4 ■	0 ■	2 ■	2 ■		YES	4 TO 20mADC	YES	YES	YES	YES	YES	YES
TY AND (TD,TG,TH OR TQ)	0	1 ■	3	2	1	0 ■	0 ■	2 ■	2 ■	d1-01		YES	YES	YES	YES	YES	YES	YES
TY, TZ AND (TD,TG,TH OR TQ)	1 ■	1 ■	3	2	1	0 ■	0 ■	2 ■	2 ■	d1-01	YES	YES	YES	YES	YES	YES	YES	YES

+ = STANDARD A1000 CONFIGURED SET UP

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING



THIS DOCUMENT AND INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND NOT TO BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN CONSENT OF YASKAWA AMERICA, INC.

REV.	DESCRIPTION	ECO #	DRAWN BY	DATE
00	INITIAL RELEASE	-	SLP	7/14/11

DATE	BY	REVISION
7/14/11	S. PETERSON	1
7/14/11	D.R. CMELAK	00
7/14/11	J. ZUEHLKE	00
7/14/11	S. PETERSON	00

DATE	BY	REVISION	SIZE	PAGE
7/14/11	S. PETERSON	1	D	1 of 1