

TABLE 1 FACTORY SET A1000 CONFIGURED DRIVE PARAMETERS

PARAMETER	DATA	UNIT	DESCRIPTION/REMARKS
A1-02	SEE TABLE 2	N/A	CONTROL METHOD SELECTION
b1-01	SEE TABLE 4 OR 5	N/A	FREQUENCY REFERENCE SELECTION 1
b1-02	SEE TABLE 4 OR 5	N/A	RUN COMMAND SELECTION 1
b1-15	SEE TABLE 4 OR 5	N/A	FREQUENCY REFERENCE SELECTION 2
b1-16	SEE TABLE 4 OR 5	N/A	RUN COMMAND SELECTION 2
C6-01	SEE TABLE 3	N/A	DRIVE DUTY RATING
d1-01	10.0	HZ.	FREQUENCY REFERENCE 1 - SEE TABLE 4 OR 5
d1-02	20.0	HZ.	FREQUENCY REFERENCE 2 - SEE TABLE 5
E1-01	208	VOLTS	INPUT VOLTAGE SETTING FOR BASE NUMBER "D_----"
	240(480)		STANDARD INPUT VOLTAGE SETTING
	600		INPUT VOLTAGE SETTING FOR BASE NUMBER "C_----"
E1-05	208	VOLTS	MAXIMUM OUTPUT VOLTAGE FOR BASE NUMBER "D_----"
	230(460)		STANDARD MAXIMUM OUTPUT VOLTAGE SETTING
	575		MAXIMUM OUTPUT VOLTAGE SETTING FOR BASE NUMBER "C_----"
E2-01	---	AMPS	MOTOR FULL LOAD AMPS (MUST BE SET BY USER)
H1-05	SEE TABLE 4 OR 5	N/A	MULTI-FUNCTION DIGITAL INPUT TERMINAL S5 FUNCTION SELECTION
H1-06	SEE TABLE 4 OR 5	N/A	MULTI-FUNCTION DIGITAL INPUT TERMINAL S6 FUNCTION SELECTION
H3-02	SEE TABLE 4 OR 5	N/A	TERMINAL A1 FUNCTION SELECTION
H3-06	SEE TABLE 4 OR 5	N/A	TERMINAL A3 FUNCTION SELECTION
H3-09	SEE TABLE 4 OR 5	N/A	TERMINAL A2 SIGNAL LEVEL SELECTION
o2-03	1	N/A	USER INITIALIZATION FACTORY SET PARAMETER DEFAULT VALUES (FOUND IN A1-03= "1110")
o3-02	1	N/A	COPY ALLOWED SELECTION ENABLED

TABLE 2 A1C FACTORY SET DRIVE PARAMETERS

OPTION	PARAMETER
PRESENT	A1-02
NONE	2
TX	3

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING

TABLE 3 A1C FACTORY SET DRIVE PARAMETERS

A1000 CONFIG. BASE NUMBER A1C(-)XXXX	MODEL NO. PARAMETER
3	C6-01
6	1
	0

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING

DRIVE OPERATION MODE SELECTION WITHOUT THE HAND/OFF/AUTO SELECTOR SWITCH OPTION TY

TABLE 4 A1C FACTORY SET DRIVE PARAMETERS

OPTION	PARAMETER												DRIVE REFERENCE			DRIVE	
	b1-01	b1-02	b1-15	b1-16	H1-05	H1-06	H3-02	H3-06	H3-09	DRIVE KEYPAD	0-10VDC AT TERM. A1	SPEED POT.	SERIAL COMM. S1 OR S2	DRIVE TERMINAL	DRIVE SERIAL COMM.		
PRESENT	1	1	0	0	3	4	0	2	2	■	YES		YES	YES			
NONE +	0	1	0	0	3	4	0	2	2	■			YES	YES			
NONE	1	0	0	0	3	4	0	2	2	■	YES			YES			
NONE	0	0	0	0	3	4	0	2	2	■			YES	YES			
TZ +	1	1	0	0	3	4	0	2	2	■		YES	YES	YES			
TZ	1	0	0	0	3	4	0	2	2	■		YES	YES	YES			
TD,TG,TH OR TQ +	3	3	0	0	3	4	0	2	2	■		YES	YES	YES	YES		
TD,TG,TH OR TQ	1	3	0	0	3	4	0	2	2	■	YES			YES	YES		
TD,TG,TH OR TQ	0	3	0	0	3	4	0	2	2	■			YES	YES	YES		
TD,TG,TH OR TQ	3	1	0	0	3	4	0	2	2	■			YES	YES	YES		
TD,TG,TH OR TQ	3	0	0	0	3	4	0	2	2	■			YES	YES	YES		
TZ AND (TD,TG,TH OR TQ)	1	3	0	0	3	4	0	2	2	■	YES		YES	YES	YES		

+ = STANDARD A1000 CONFIGURED SET UP

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING

DRIVE OPERATION MODE SELECTION WITH THE HAND/OFF/AUTO SELECTOR SWITCH OPTION TY

TABLE 5 A1C FACTORY SET DRIVE PARAMETERS

OPTION	PARAMETER												DRIVE REFERENCE		DRIVE	
	b1-01	b1-02	b1-15	b1-16	H1-05	H1-06	H3-02	H3-06	H3-09	DRIVE KEYPAD	SPEED POT.	SIGNAL LEVEL AT TB1 (4) AND (5) COMM.	HAND/OFF/AUTO SWITCH IN THE "HAND" POSITION (1) AND (2)	RUN/STOP CONTROL	AUTO MODE	
PRESENT	1	1	0	0	3	4	0	F	2	■		4 TO 20mADC	YES	YES		
TY +	1	1	0	0	3	4	0	F	2	■		0 TO 10VDC	YES	YES		
TY	1	1	0	0	3	4	0	F	0	V		4 TO 20mADC	YES	YES		
TY AND TZ +	1	1	0	0	3	4	2	F	2	■		4 TO 20mADC	YES	YES		
TY AND TZ	1	1	0	0	3	4	2	F	0	V		0 TO 10VDC	YES	YES		
TY AND (TD,TG,TH OR TQ)	0	1	3	3	2	1	0	F	2	■		YES	YES	YES	YES	
TY, TZ AND (TD,TG,TH OR TQ)	1	1	3	3	2	1	0	F	2	■		YES	YES	YES	YES	

+ = STANDARD A1000 CONFIGURED SET UP

■ = FACTORY 2-WIRE INITIALIZATION DEFAULT SETTING



THIS DOCUMENT AND INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND NOT TO BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN CONSENT OF YASKAWA AMERICA, INC.

REV.	DESCRIPTION	ECO #	DATE	DRAWN BY
00	INITIAL RELEASE	-	8/16/12	DRC

DATE	DRIVE PARAMETERS	DATE	DRIVE PARAMETERS
8/16/12	A1000 CONFIGURED	8/16/12	A1000 CONFIGURED
8/16/12	TYPE 3R	8/16/12	TYPE 3R

DATE	DRIVE PARAMETERS	DATE	DRIVE PARAMETERS
8/16/12	A1000 CONFIGURED	8/16/12	A1000 CONFIGURED
8/16/12	TYPE 3R	8/16/12	TYPE 3R

YASKAWA

THIS DOCUMENT AND INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND NOT TO BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN CONSENT OF YASKAWA AMERICA, INC.

DATE	DRIVE PARAMETERS	DATE	DRIVE PARAMETERS
8/16/12	A1000 CONFIGURED	8/16/12	A1000 CONFIGURED
8/16/12	TYPE 3R	8/16/12	TYPE 3R

DATE	DRIVE PARAMETERS	DATE	DRIVE PARAMETERS
8/16/12	A1000 CONFIGURED	8/16/12	A1000 CONFIGURED
8/16/12	TYPE 3R	8/16/12	TYPE 3R

YASKAWA

THIS DOCUMENT AND INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND NOT TO BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN CONSENT OF YASKAWA AMERICA, INC.

DATE	DRIVE PARAMETERS	DATE	DRIVE PARAMETERS
8/16/12	A1000 CONFIGURED	8/16/12	A1000 CONFIGURED
8/16/12	TYPE 3R	8/16/12	TYPE 3R

DATE	DRIVE PARAMETERS	DATE	DRIVE PARAMETERS
8/16/12	A1000 CONFIGURED	8/16/12	A1000 CONFIGURED
8/16/12	TYPE 3R	8/16/12	TYPE 3R